



Remote Programming Instructions for Sanyo, Samsung & Toshiba TV's

1. Manually turn on TV.
2. Press and hold the **CODE SEARCH** key until the indicator light illuminates.
Then release the **CODE SEARCH** key.
3. Press and release the **TV** key. The indicator light blinks and then remains lit.
4. **Enter code for your brand type of Television:**
- 5.

Sanyo	Samsung	LG TV	Toshiba
1142	0812	1423	1524

6. Aim the remote at the TV and press the **ON-OFF** key. Your TV will turn off; you have successfully programmed the remote.